



### Radiator cap

Pressure relief valve opens at	new radiator cap $1.0 \pm 0.15$ bar gauge pressure
	used radiator cap 1.0 – 0.2 bar gauge pressure
Radiator valve opens starting at	0.1 bar vacuum

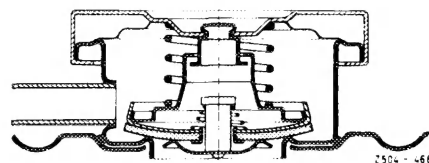

### Special tools

Tester for cooling system and radiator cap

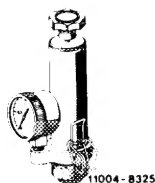

001 589 48 21 00


Double connection for radiator cap



000 589 73 63 00

### Checking pressure relief valve

- 1 Attach double connection to leak tester by means of holding clips.
- 2 Place expansion tank cap on double connection.
- 3 Test opening pressure by pumping.

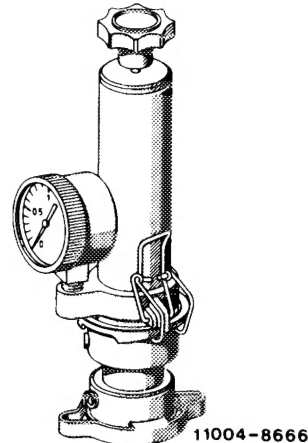

### Checking vacuum valve

The vacuum valve (arrow) should rest against rubber seal, should be easily lifted and snap back upon release.

